


## Installation of the Compton Vertipool at Forton

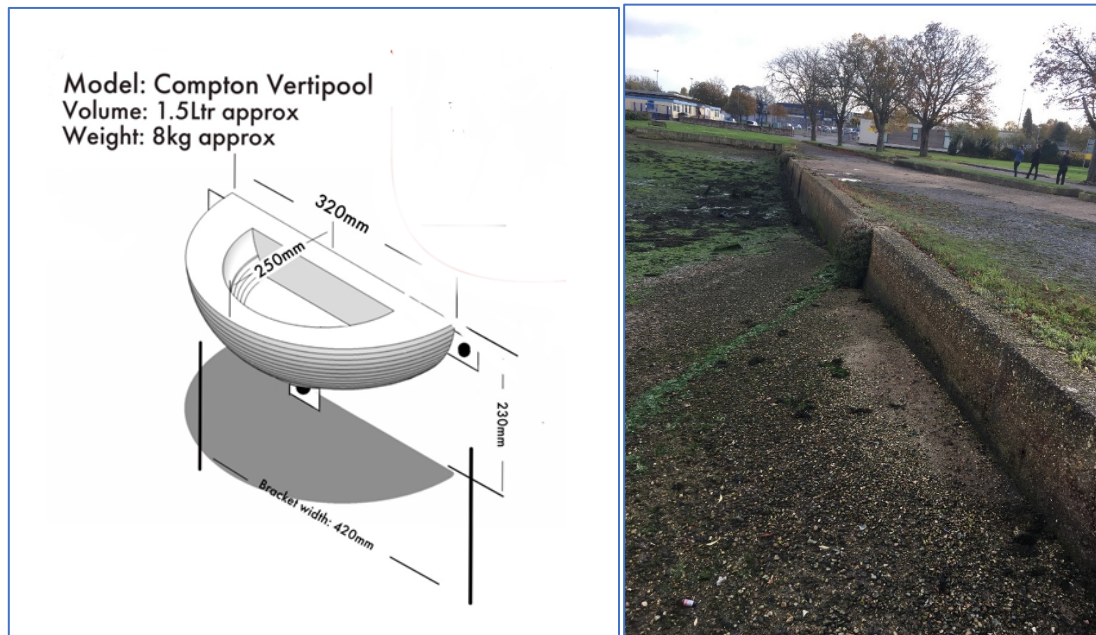

- 1) The final position of the vertipools 'lip' needs to be within the MHW and MLWM. Ideally vertipools would be spread over a range within these limits.
- 2) Drill three, 20mm hole at 90° to the wall (in the appropriate positions), into the existing wall as shown above. Holes will either be drilled into existing wall or if an existing hole is being filled as part of the maintenance work, then this will be utilised, where possible.
- 3) Insert 18mm threaded stud marine grade and washer into hole and this is then held in place with resin/ or similar which sets prior tidal inundation.
- 4) The fixing bracket (marine grade stainless steel) and vertipool will then aligned with the threaded studs and bolted in place, see images below.

